

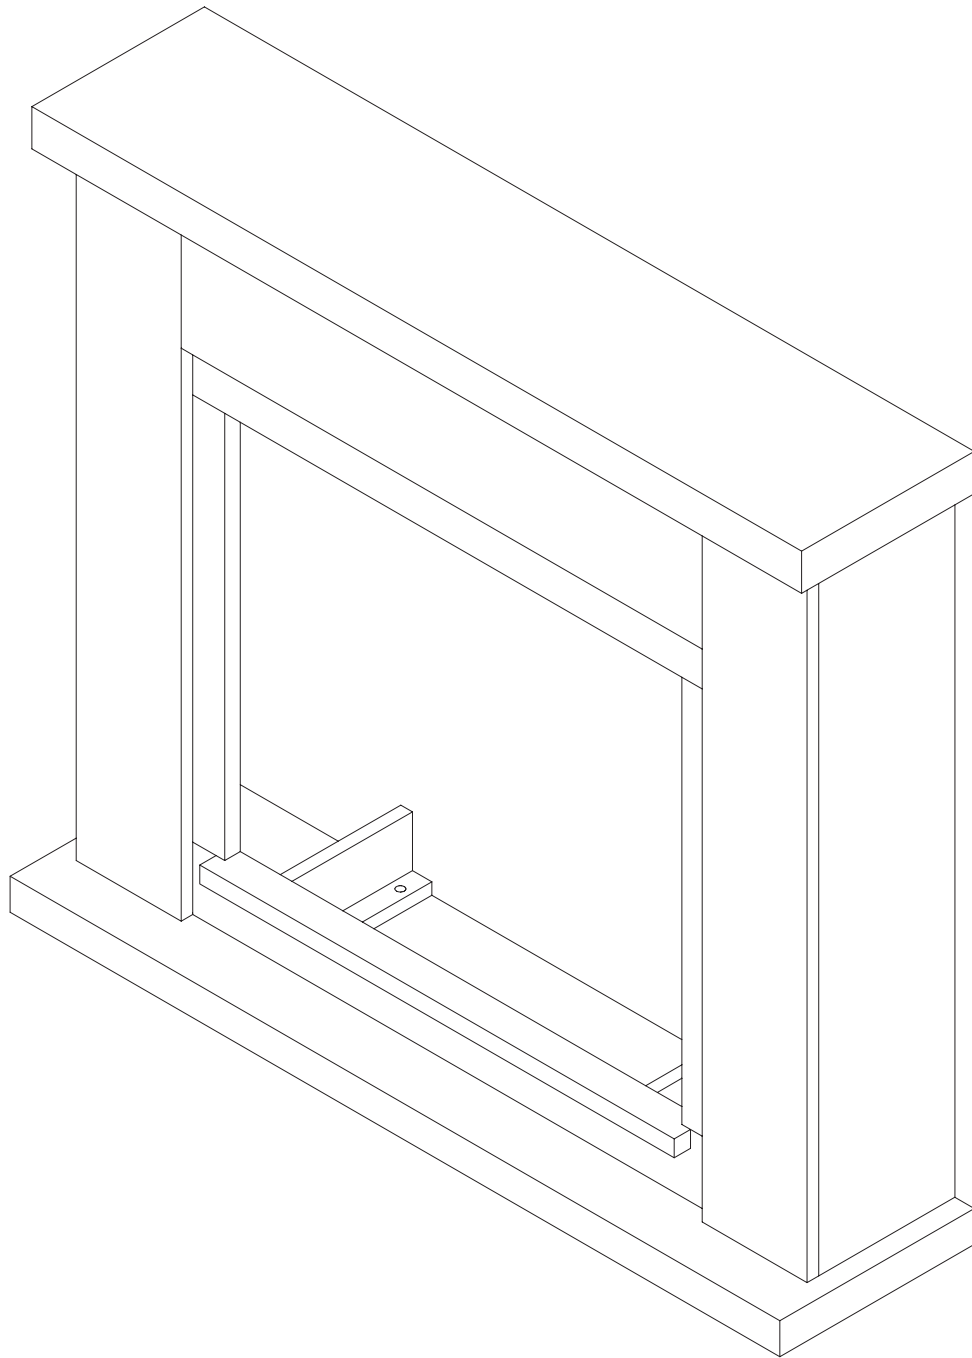
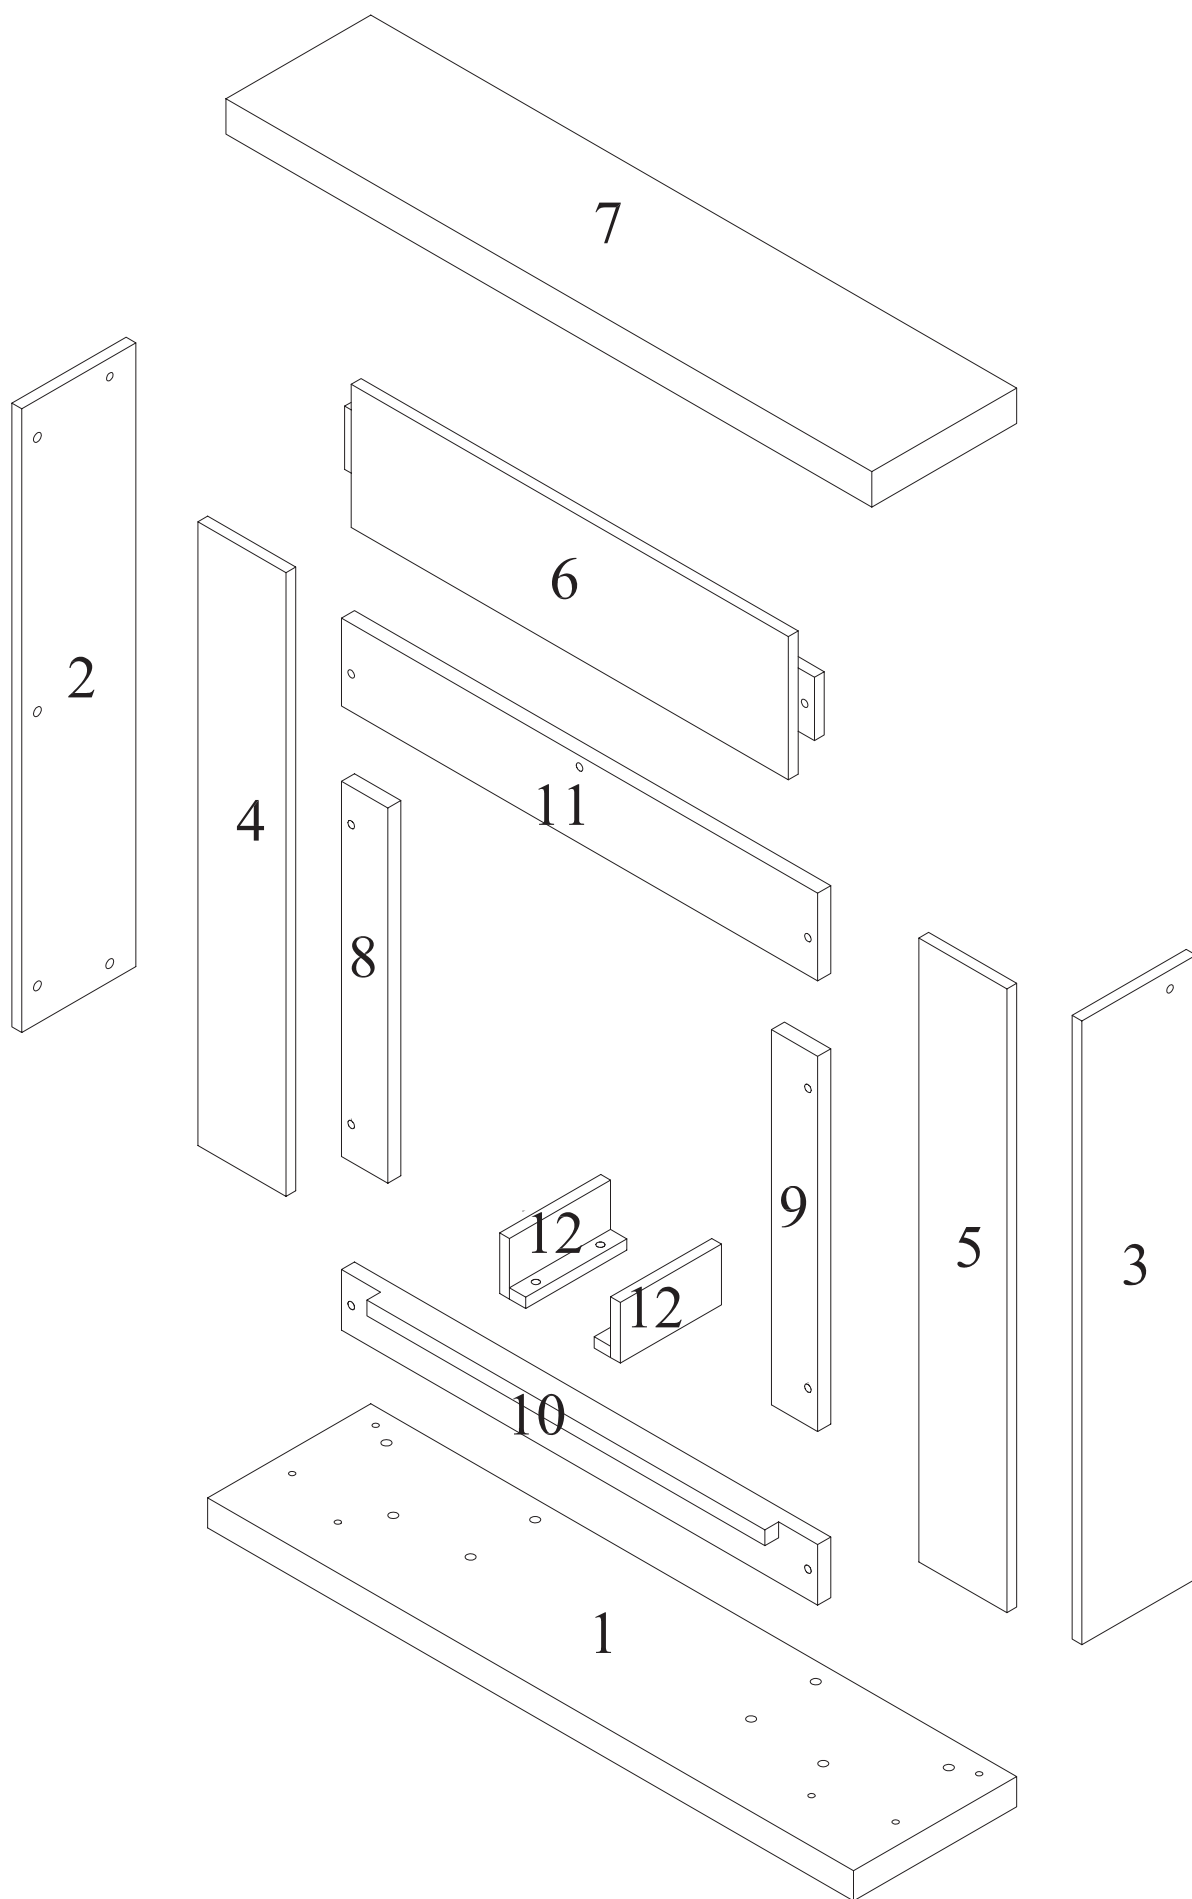

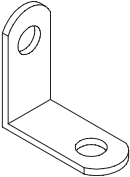
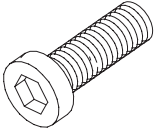
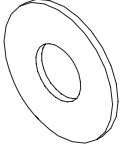



FRODE

FM461

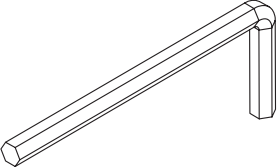


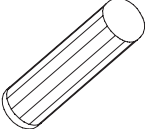

A  Ø6 x 12mm x20	B  x 10	C  Ø6 x 28mm x 19
D  x 19	E  x 1	H  Ø8 x 30mm x 6

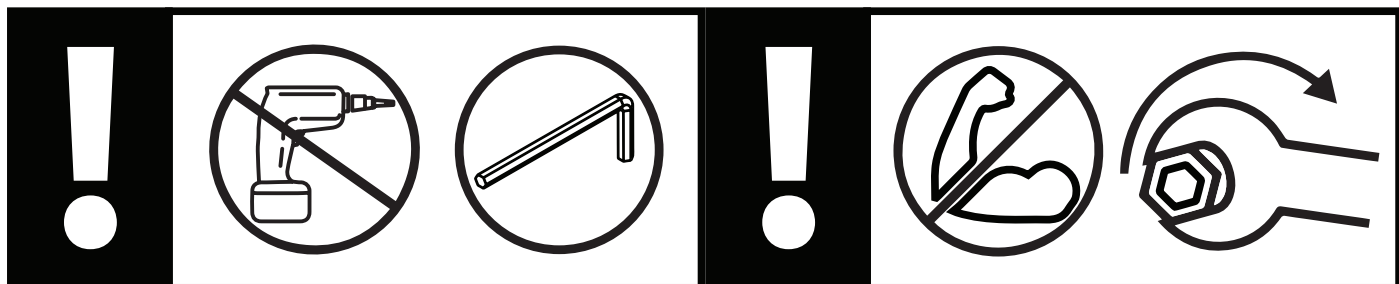

1

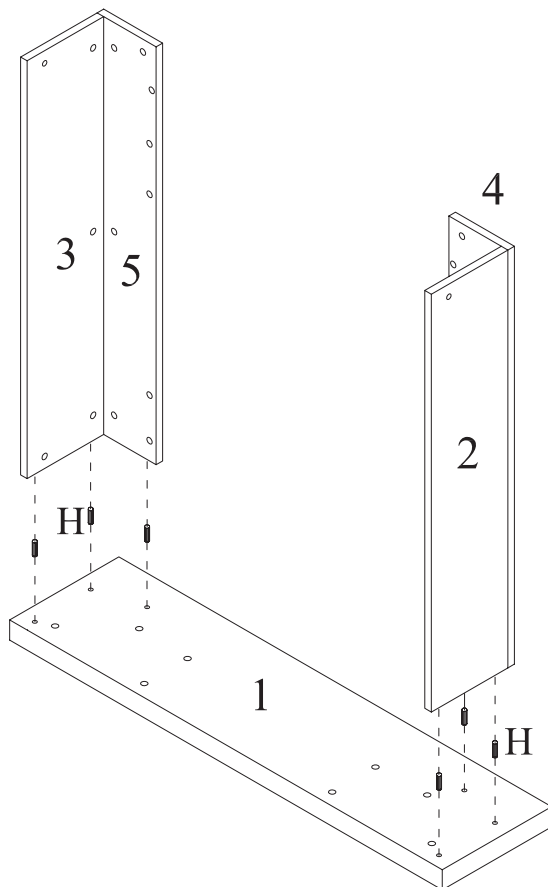


H



Ø8 x 30mm

x 6

2

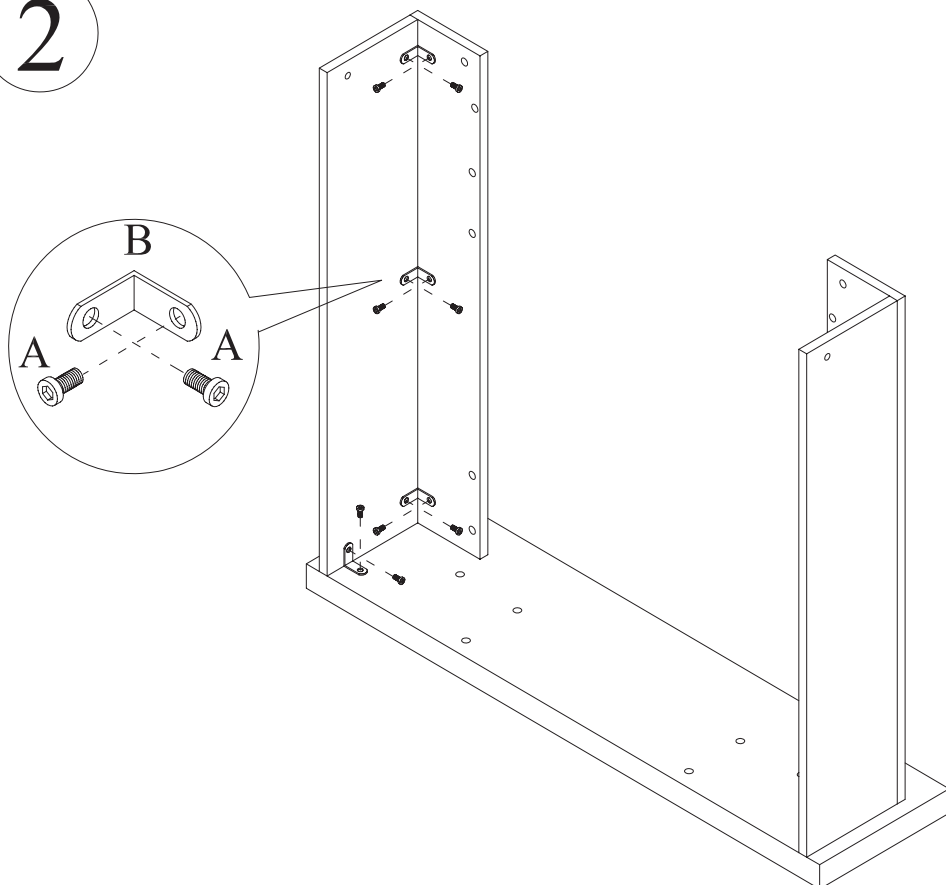


A



Ø6 x 12mm



x16

B



x 8

3

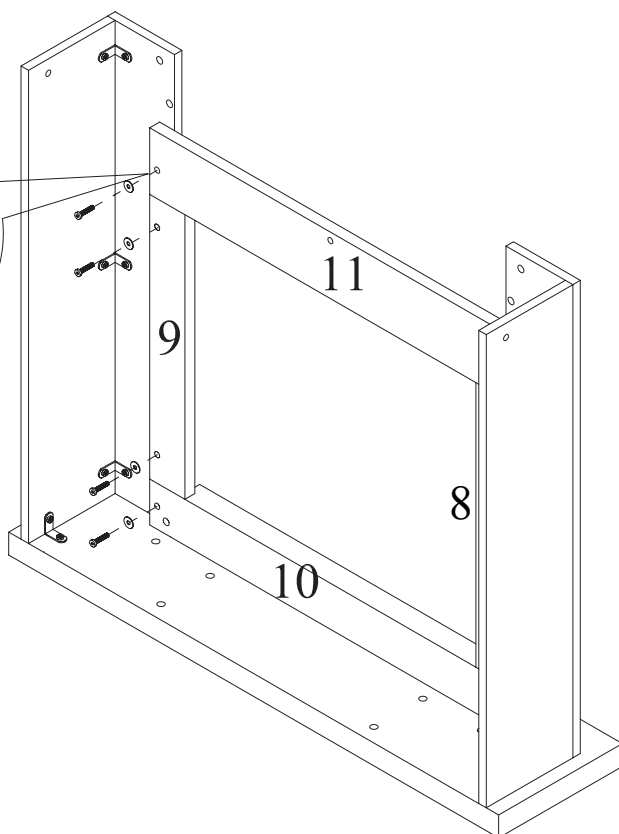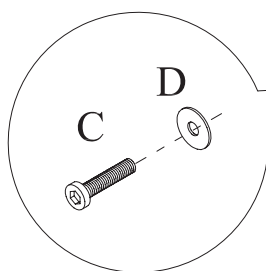

C



Ø6 x 28mm
x 8

D



x 8


4

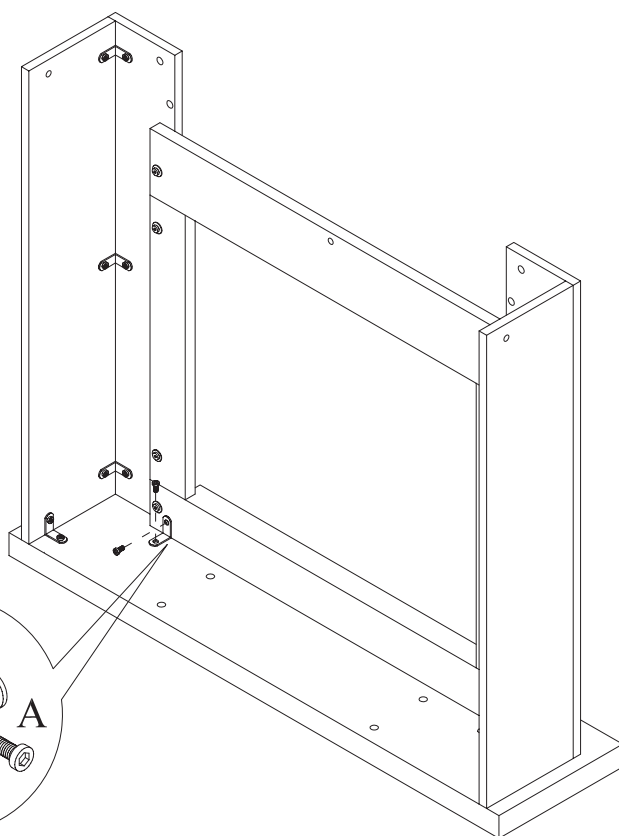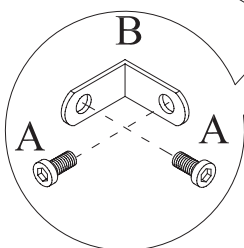

A



Ø6 x 12mm
x 4

B



x 2

5

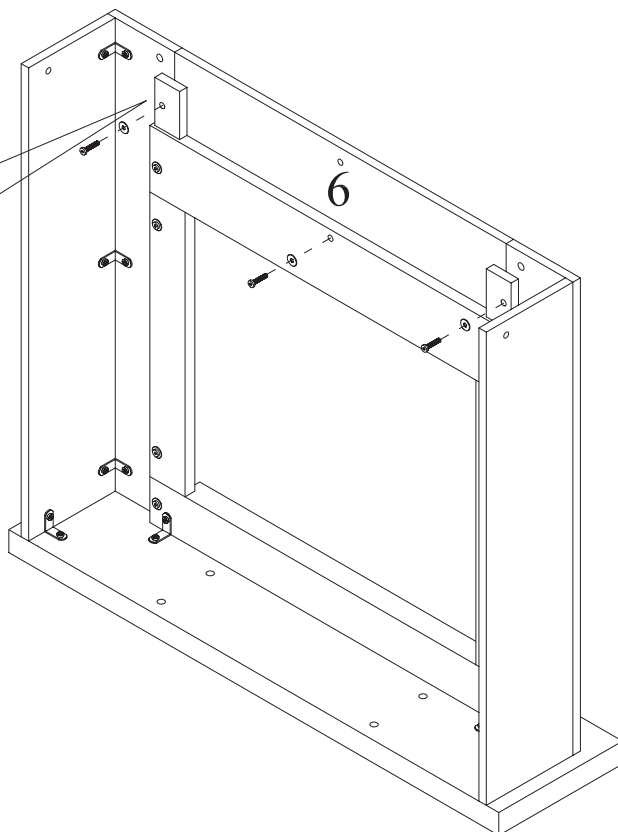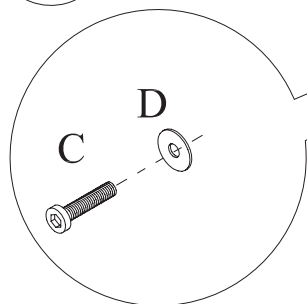

C



Ø6 x 28mm
x 3

D



x 3

6

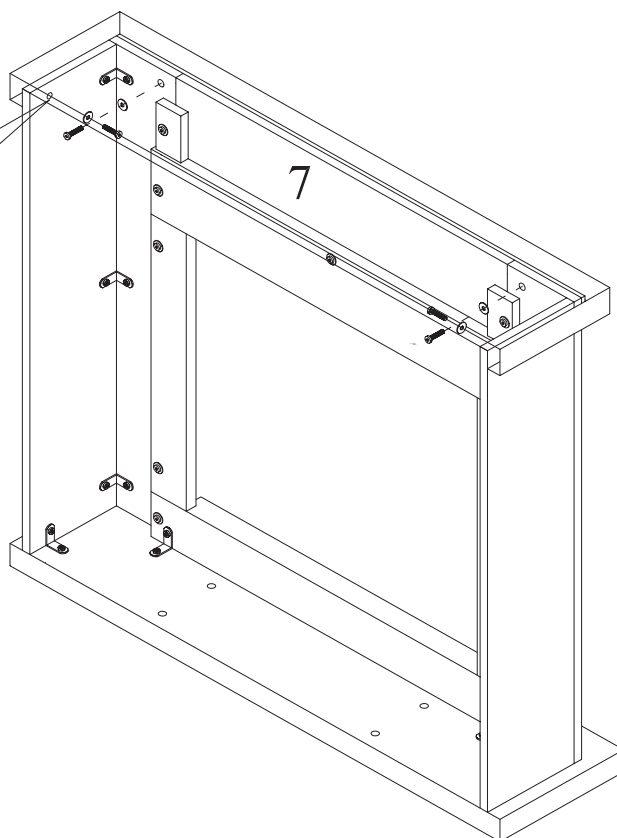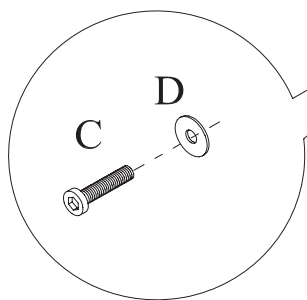

C

Ø6 x 28mm
x 4

D



x 4

7



C

Ø6 x 28mm
x 4


D



x 4

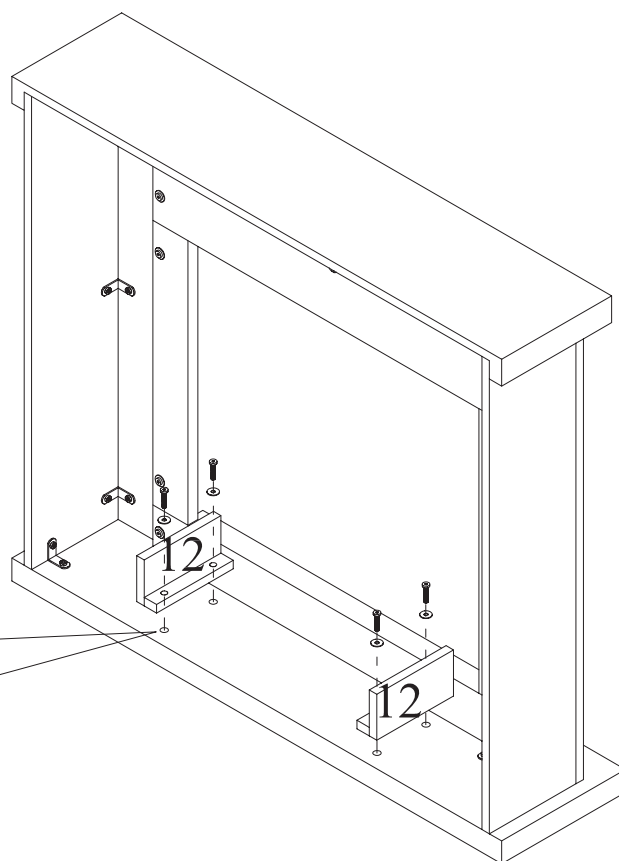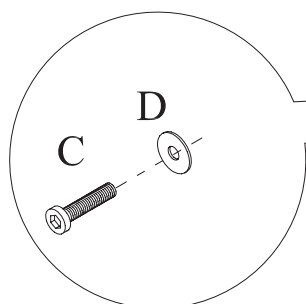

8

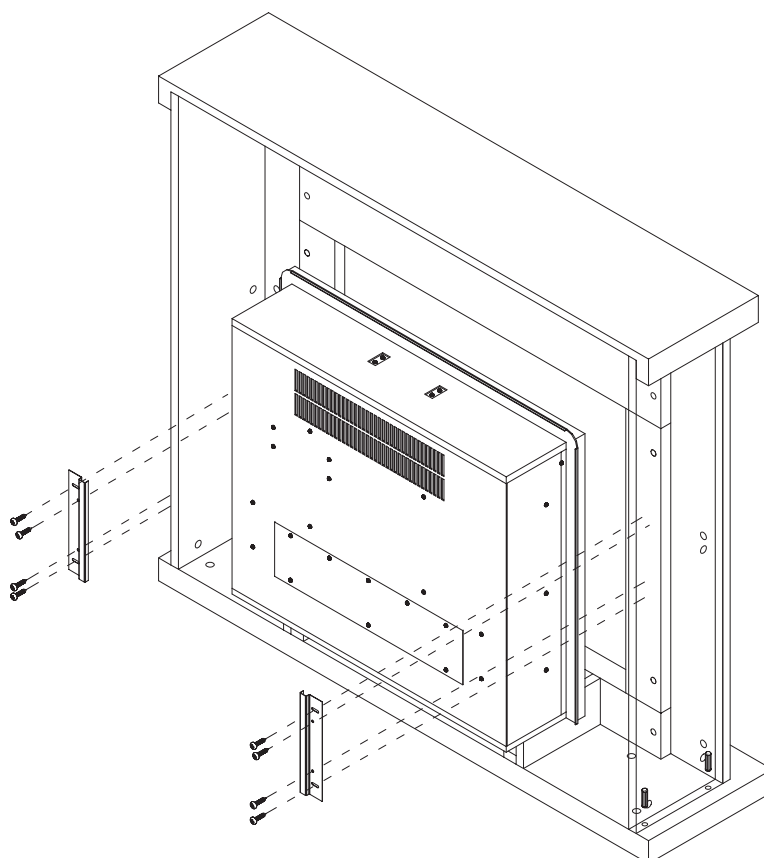

TAGU
the missing piece